



WIDTH ADJUSTMENT KITS

Order the Width Adjustment Kit that matches the style and height of Fence Panels to be cut down in width

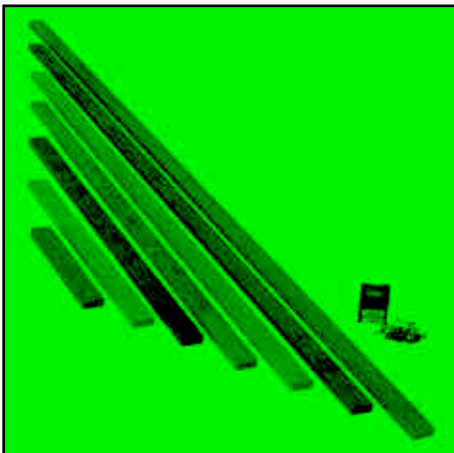


Cedar Privacy Trim Kit

44mm x 17mm
available lengths:-
2100mm
1800mm
1500mm
1200mm
900mm
600mm
300mm

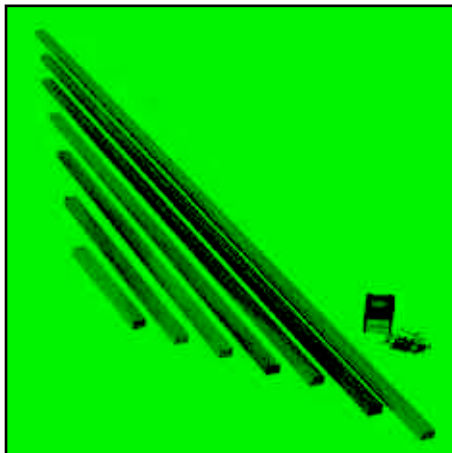

Cedar Slatted Trim Kit

30mm x 17mm
available lengths:-
2100mm
1800mm
1500mm
1200mm
900mm
600mm
300mm

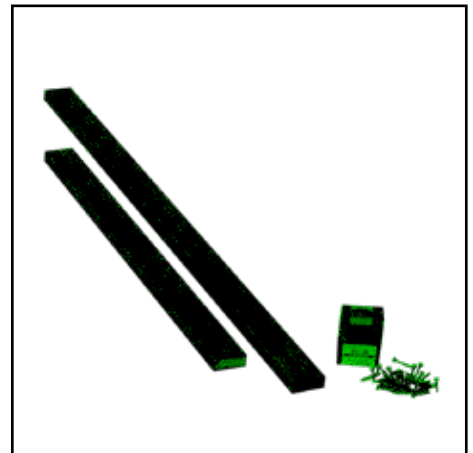


Redwood Slatted Trim Kit

44mm x 17mm
available lengths:-
900mm
600mm


INSTALLATION MANUAL

CEQUENCE

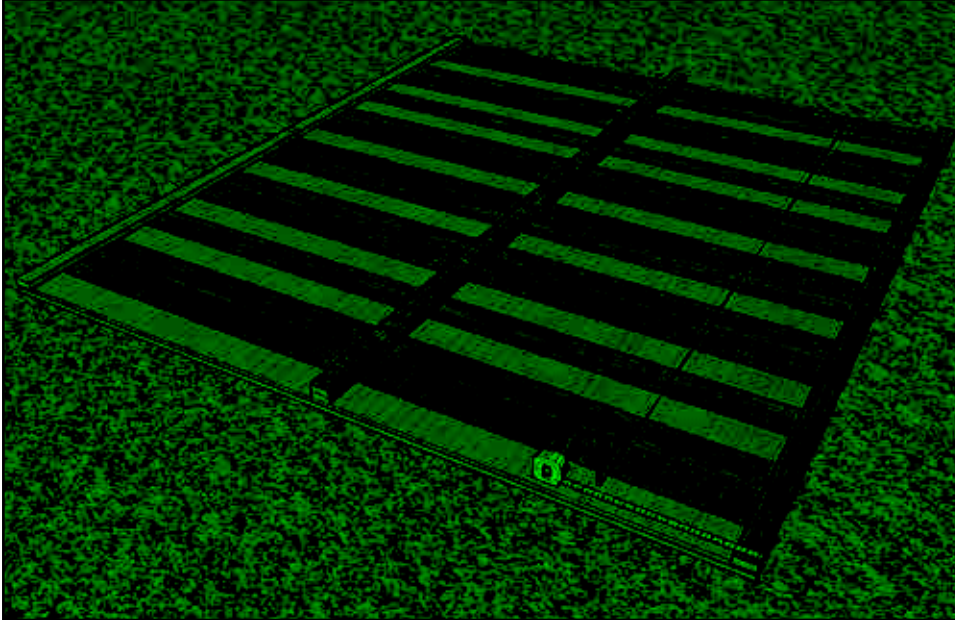

1

Place the fence panel to be trimmed face down and mark the cut line on the back of the panel.

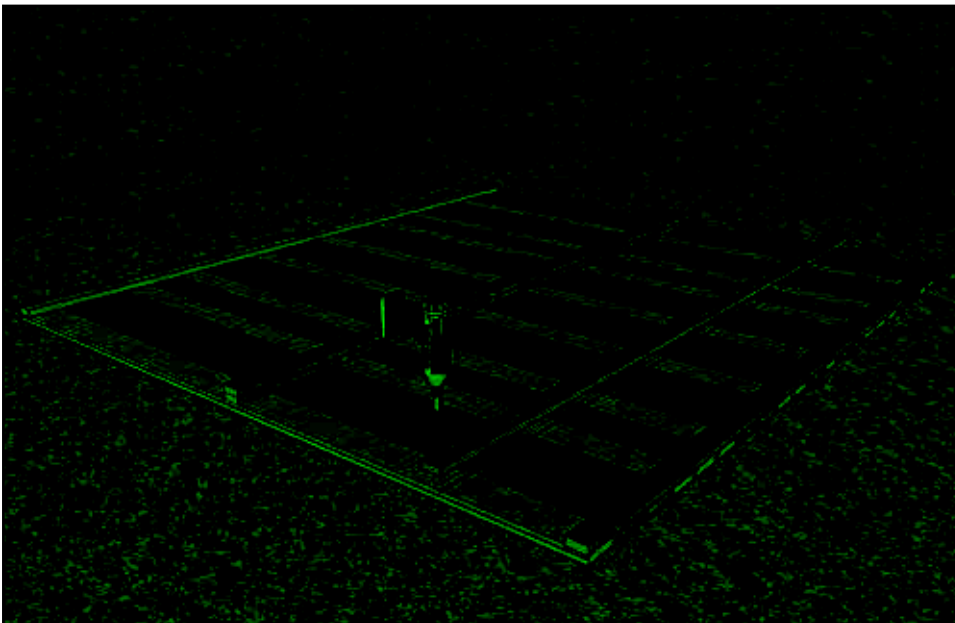


2

Position the width adjustment batten to the back of panel on the cut line.


Use the screws provided at top, bottom and panel centre to hold the width adjustment batten in place.

CEQUENCE

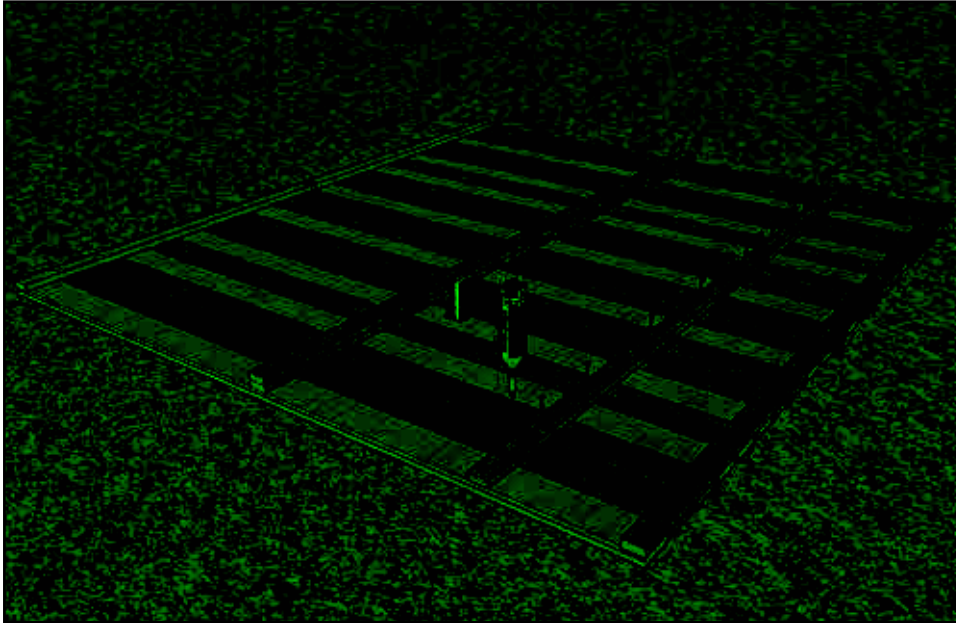

3


Fix screws provided to the rear of the width adjustment batten matching the same fixing layout as used on the existing battens for your panel type.

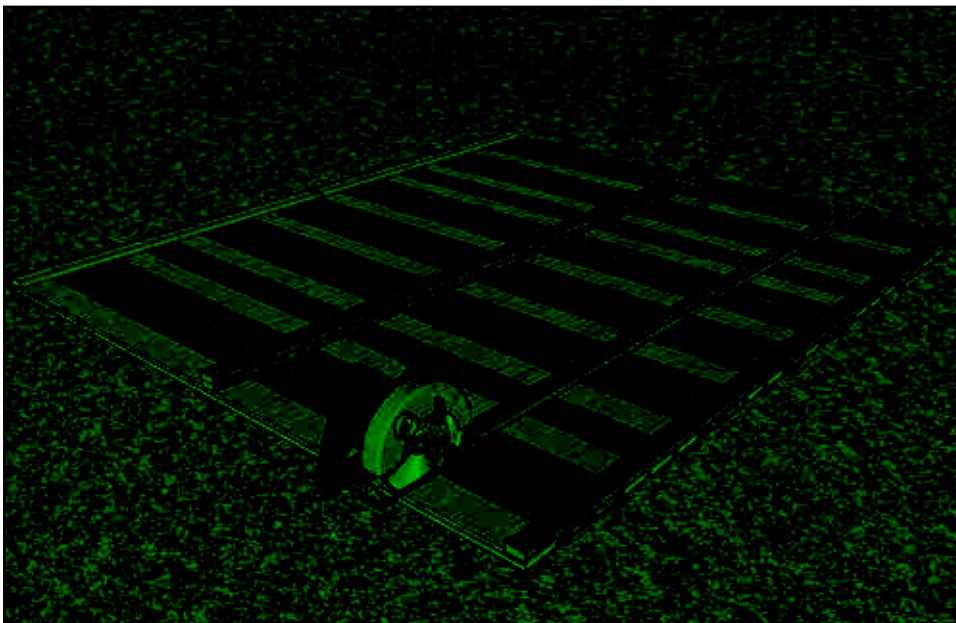

4

Once all fixings are in place cut the panel from the rear using the trim batten as a cutting line guide.

CEQUENCE

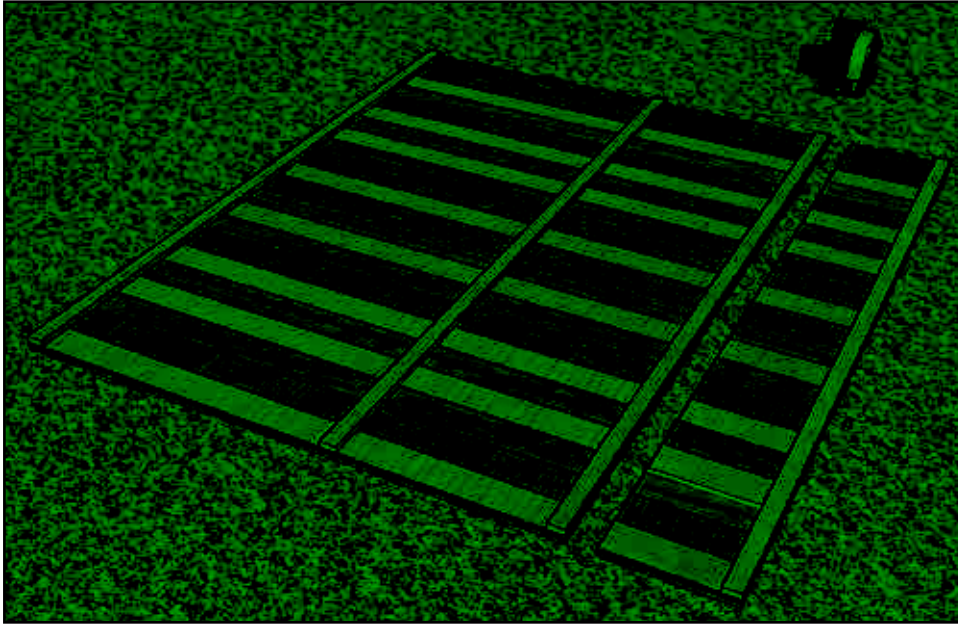

7

Your fence panel is now cut to size and can be installed as per standard with panels.