


## Double Sided Fencing

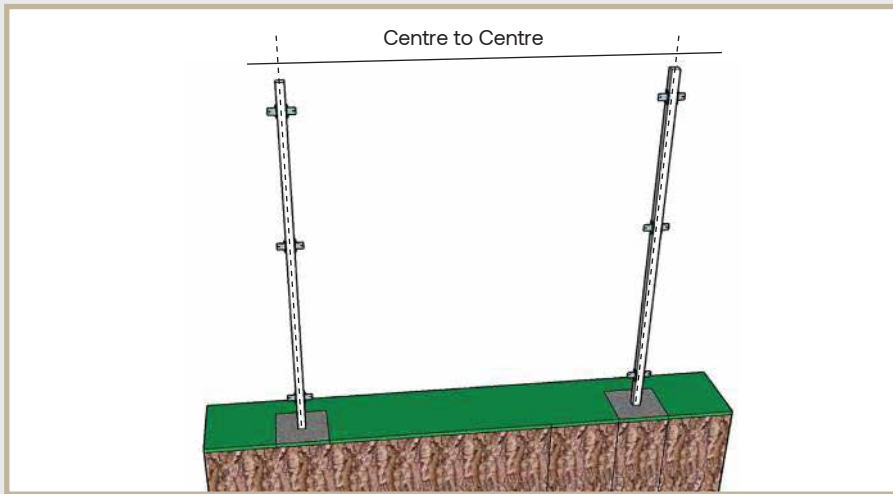

**1**



Cequence metal post to be set out centres equal to the width of the fence panel to be installed.

When at the end of a fence run the panel should end on the outer edge of a post.

**2**

Install Cequence metal posts into ground.

Posts are available for panels up to 2100mm high.

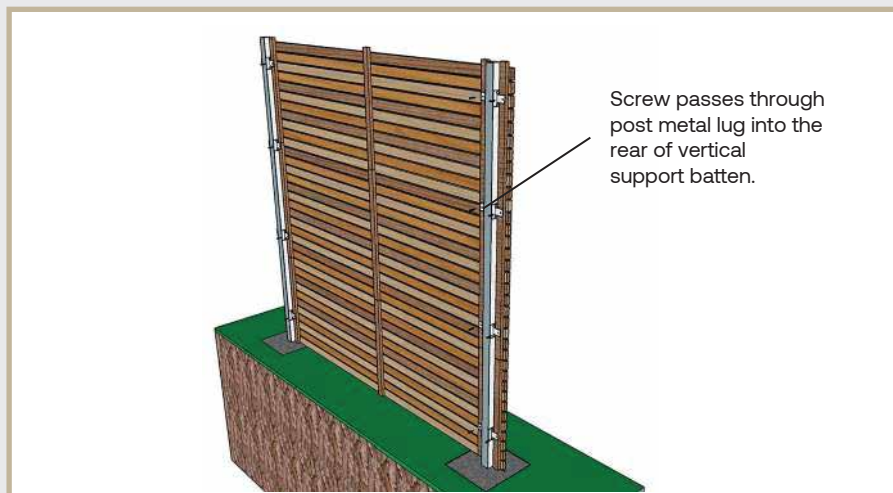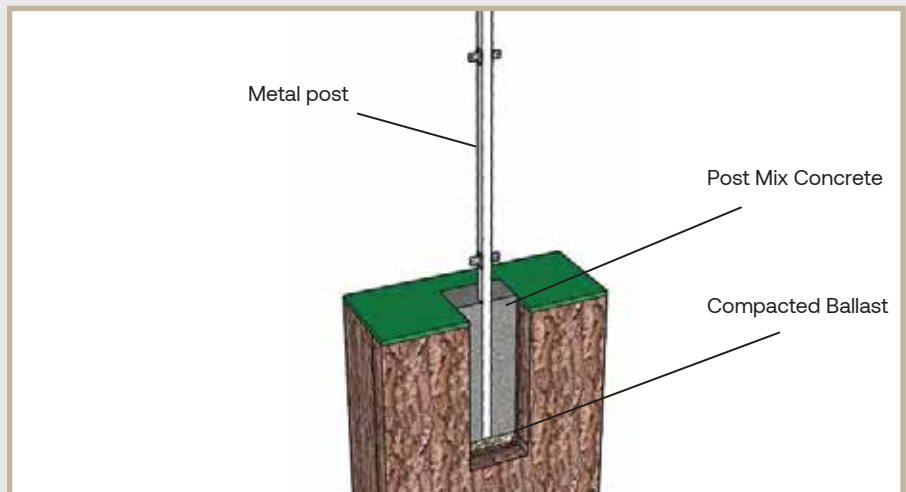


**3**

Attaching the first panel side to the double sided post.

Intermediate panels are fixed midway to the front of the post.

## Double Sided Fencing

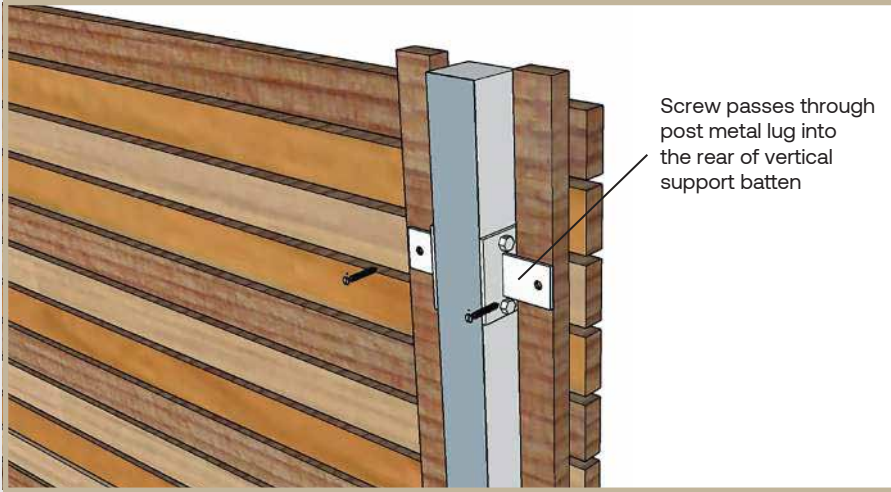


4

For end of a fence run the panel should be fixed to the outer side of a post.

5


Attaching the second panel side to the double sided post.

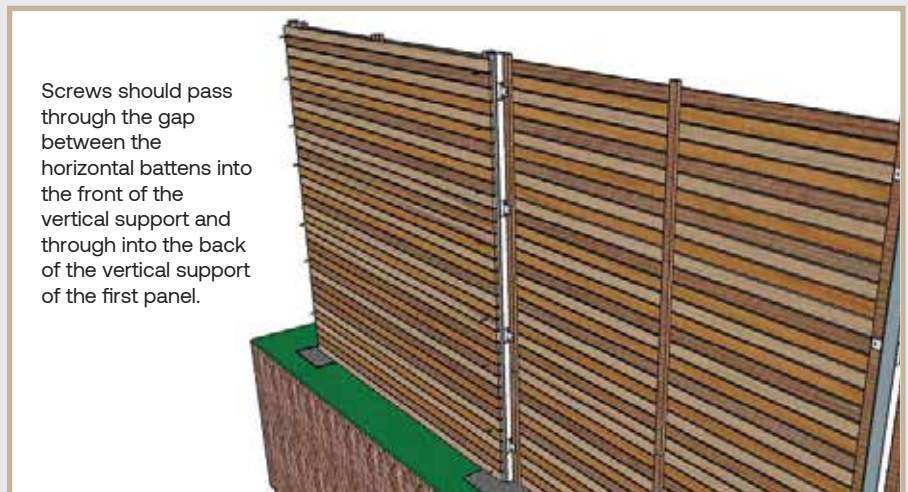


6

The capping rail is pushed down onto the top of the back batten up stands.

3off 63 cedar coloured powder coated stainless steel screws should be used to fix the capping rail into position.

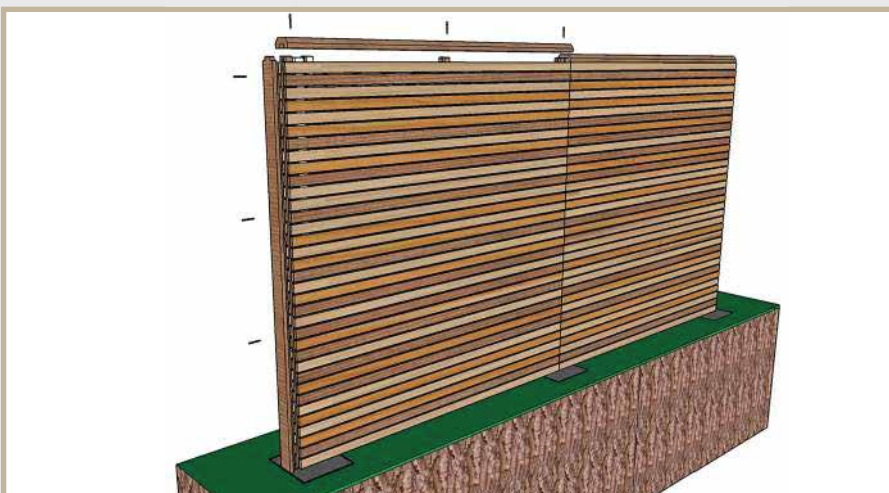

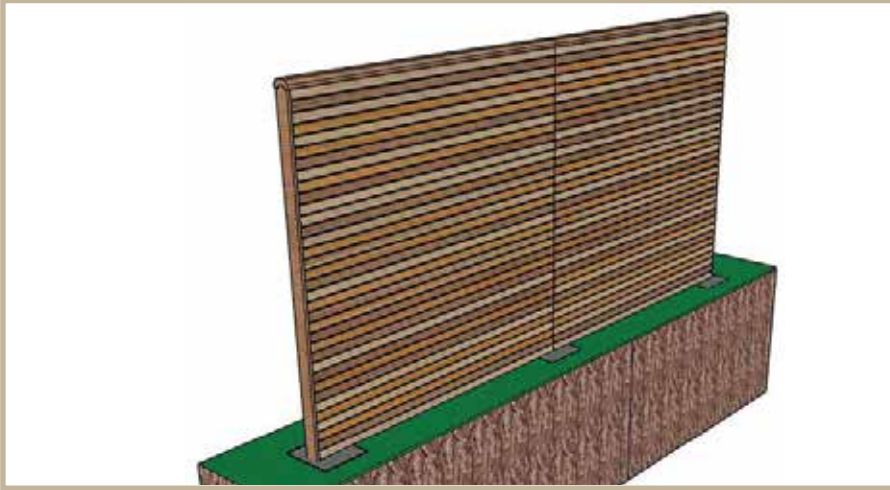

7

Completed double sided  
garden fencing panel.