

1


Cequence Cedar post to be set out centres equal to the width of the fence panel to be installed.

When at the end of a fence run the panel should end on the outer edge of a post.

2

Install Cequence Cedar Posts into ground.


For more information on Post Saver Sleeves visit: www.postsaver.com

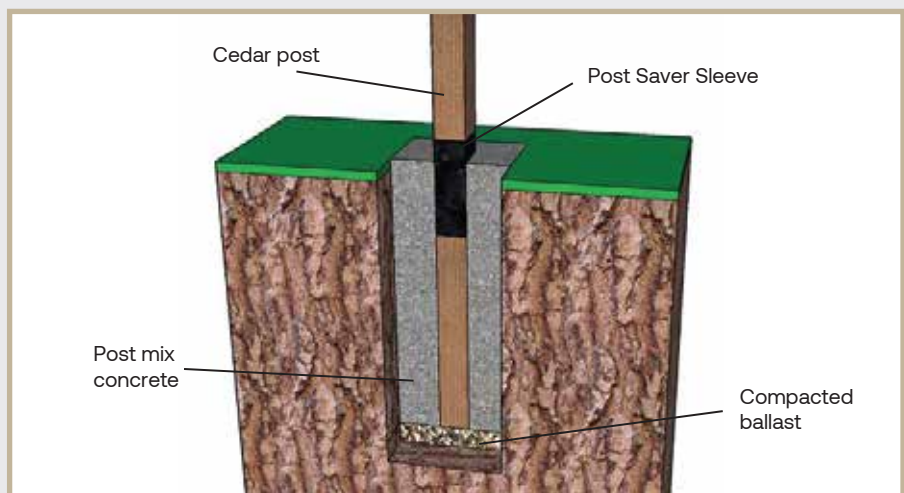


3

Screw Cequence panels into front face of post.

Intermediate panels are fixed midway to the front of the post. For end of a fence the panel should be fixed on the outer edge of a post.

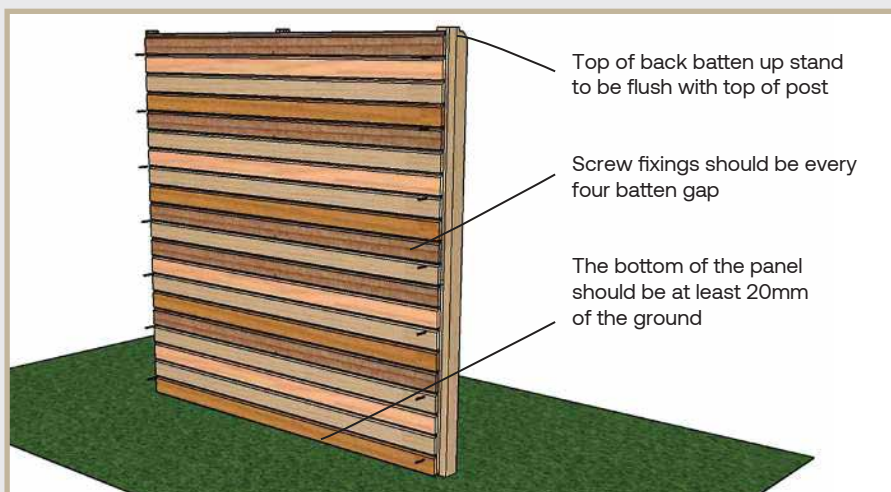

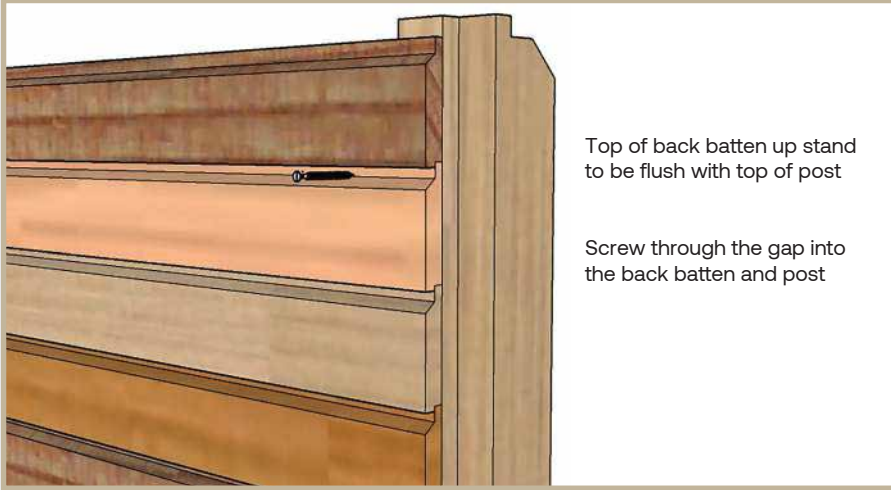



4

Position of post centres to be equal to the width of the fence panel to be installed.

When at the end of a fence run the panel should end on the outer edge of a post.


5

Attaching the first panel side to the double sided post.

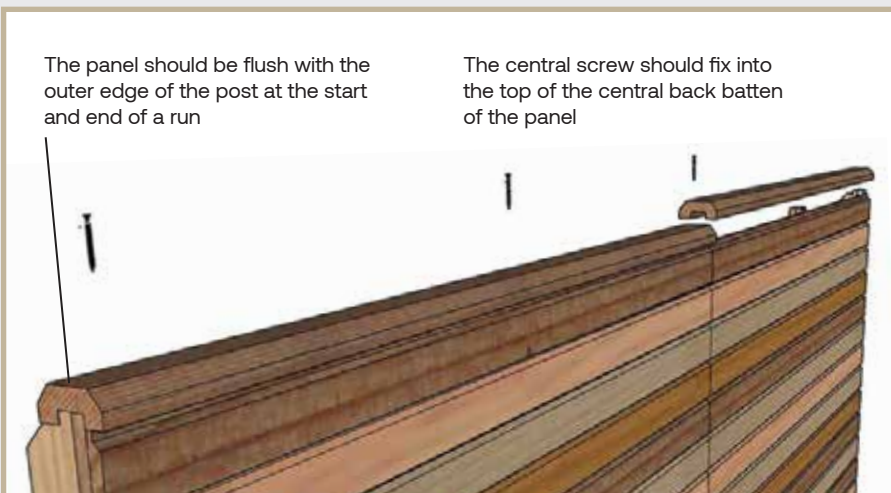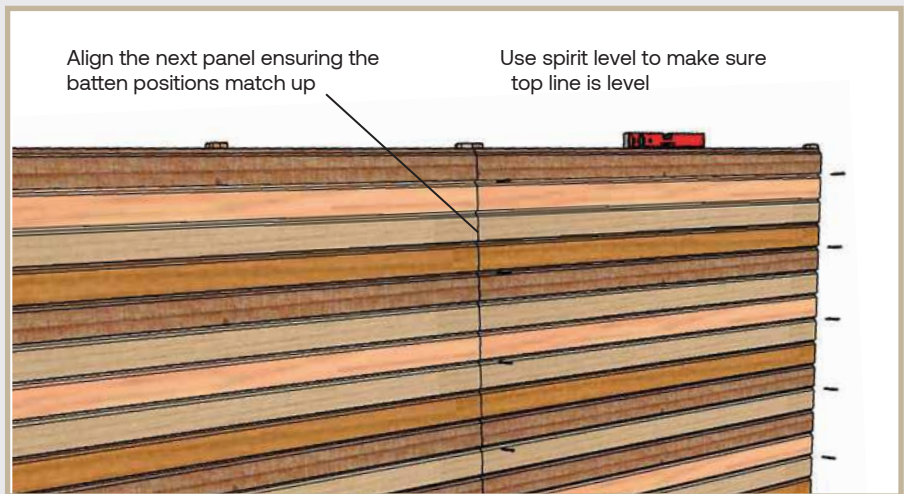

6

Intermediate panels are fixed midway to the front of the post. For end of a fence run the panel should be fixed on the outer edge of a post.

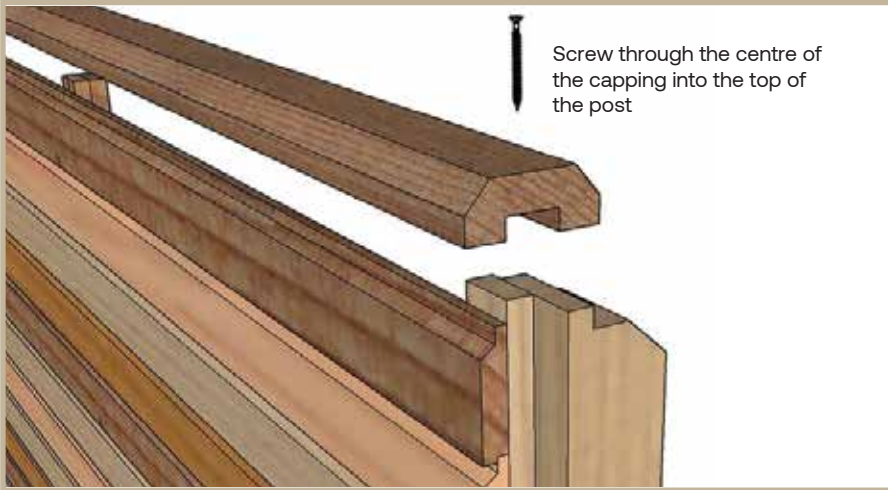


7

Attaching the capping rail.

8

The completed panel front face.

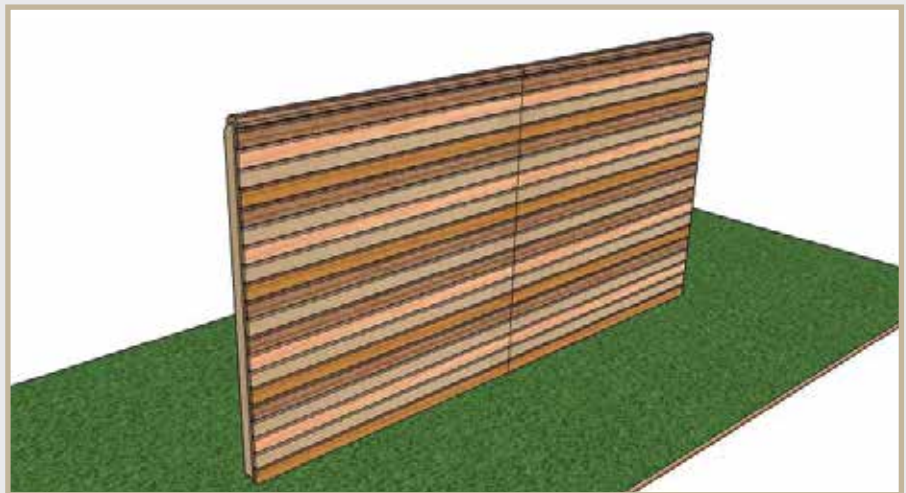

9

The completed panel rear face.

