

Width Adjustment Kits



Slatted Panel
Width Adjustment Kit

30mm x 17mm
Cedar battens

- 60cm
- 90cm
- 120cm
- 150cm
- 180cm
- 210cm



Slatted Panel
Width Adjustment Kit

30mm x 17mm
Cedar battens

- 60cm
- 90cm
- 120cm
- 150cm
- 180cm
- 210cm


Installation Guide



Cedar Privacy Panel
Width Adjustment Kit

44mm x 17mm
Cedar battens

- 60cm
- 90cm
- 120cm
- 150cm
- 180cm
- 210cm

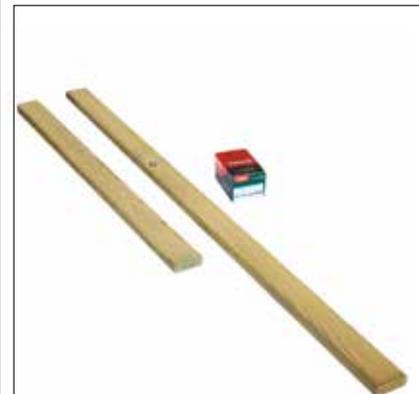


Horizontal Slat Fence Panel
Width Adjustment Kit

44mm x 17mm
Cedar battens


- 60cm
- 90cm
- 120cm
- 150cm
- 180cm
- 210cm

1

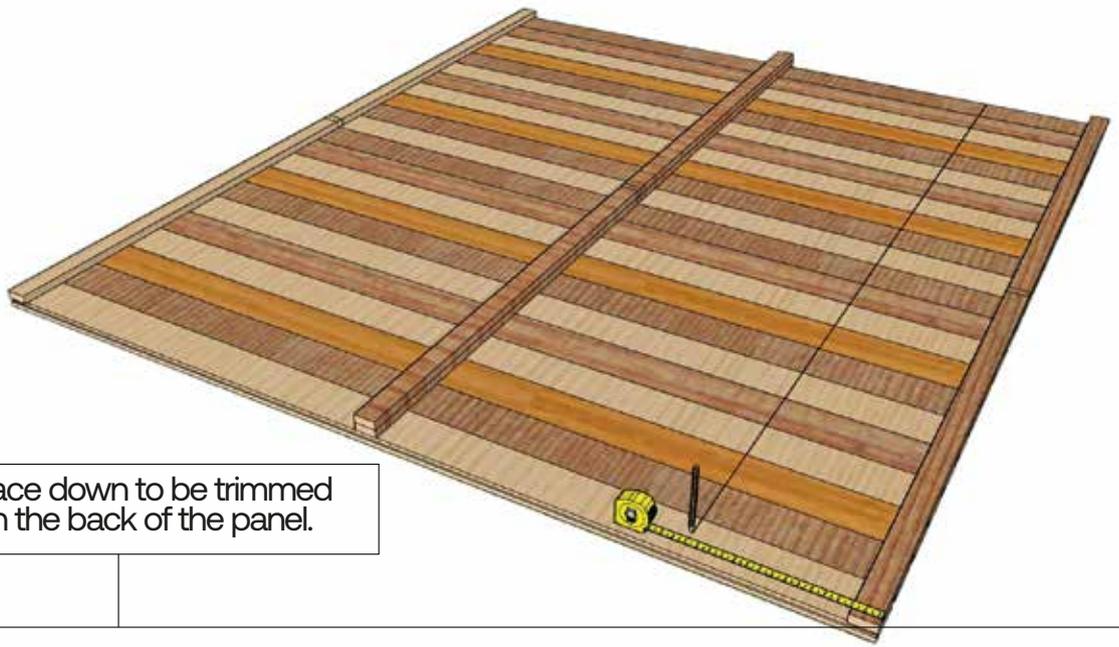

Place the fence panel face down to be trimmed and mark the cut line on the back of the panel.


2

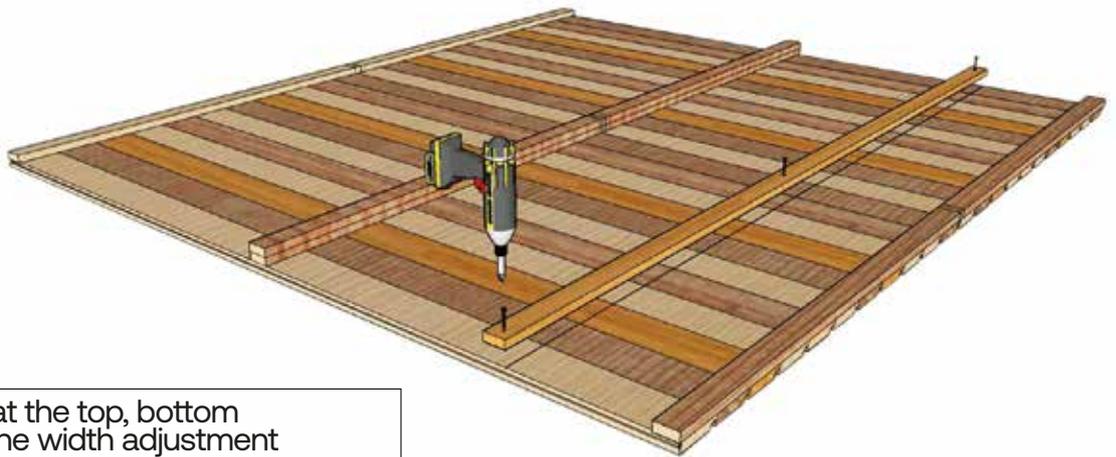

Use the screws provided at the top, bottom and panel centre to hold the width adjustment batten in place.


Position the width adjustment batten to the back of panel on the cut line.

3

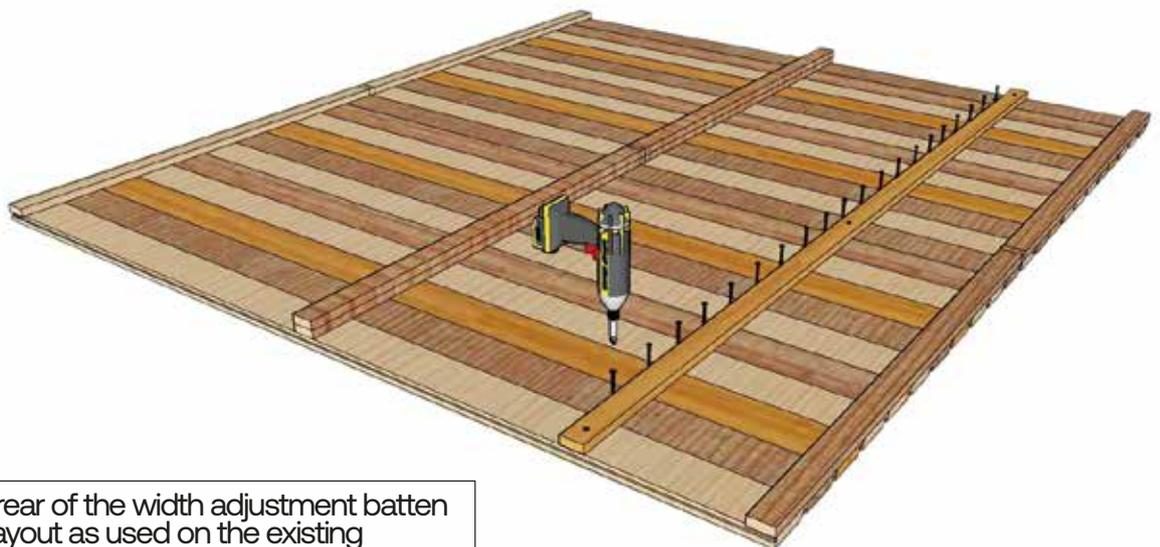

Fix screws provided to the rear of the width adjustment batten matching the same fixing layout as used on the existing battens for your panel type.

4

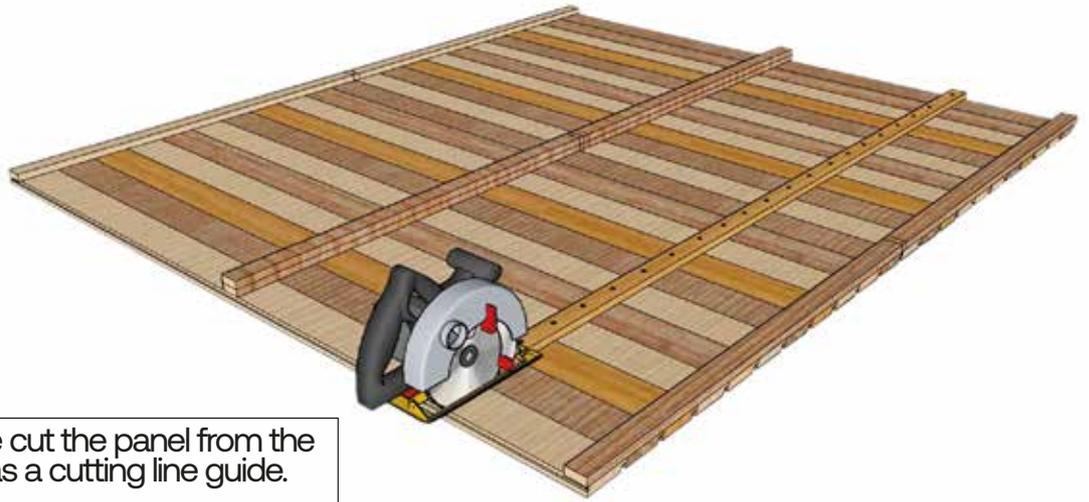

Once all fixings are in place cut the panel from the rear using the trim batten as a cutting line guide.

5



Your fence panel is now cut to size and can be installed as per standard with panels.



Contemporary
Fencing

Contact Us

sales@contemporaryfencing.com

01227 915054

www.contemporaryfencing.com