



Contemporary
Fencing

Double Sided Fencing

Installation Guide



CUSTOMER SUPPORT




01227 915054



sales@contemporaryfencing.com

* This guide is not intended
for use with double sided hit & miss fencing

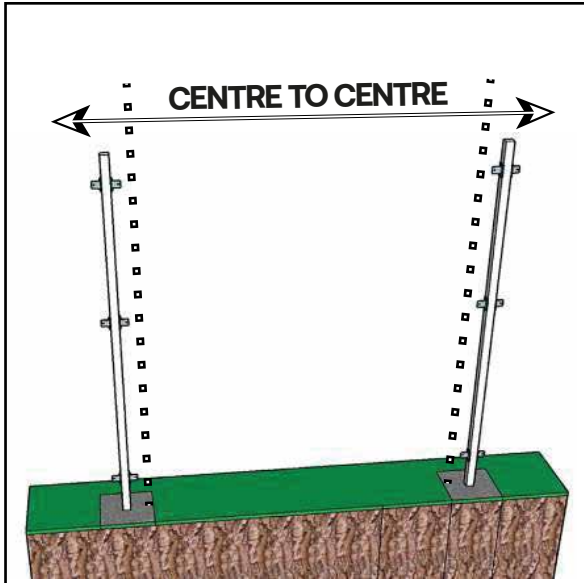


1

Sequence metal post is to be set out centres equal to the width of the fence panel.

When at the end of a fence run the panel should end on the outer edge of a post.

2


Sequence metal post to be set out with the centres equal to the width of the fence panel to be installed.

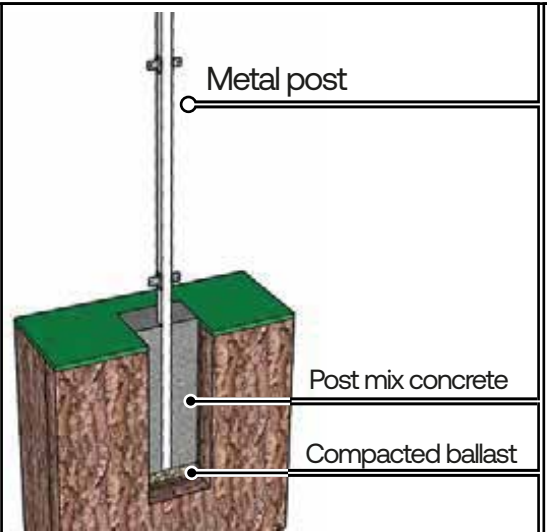

3


Attach the first panel side to the double sided post.

Intermediate panels are fixed midway to the front of the post.

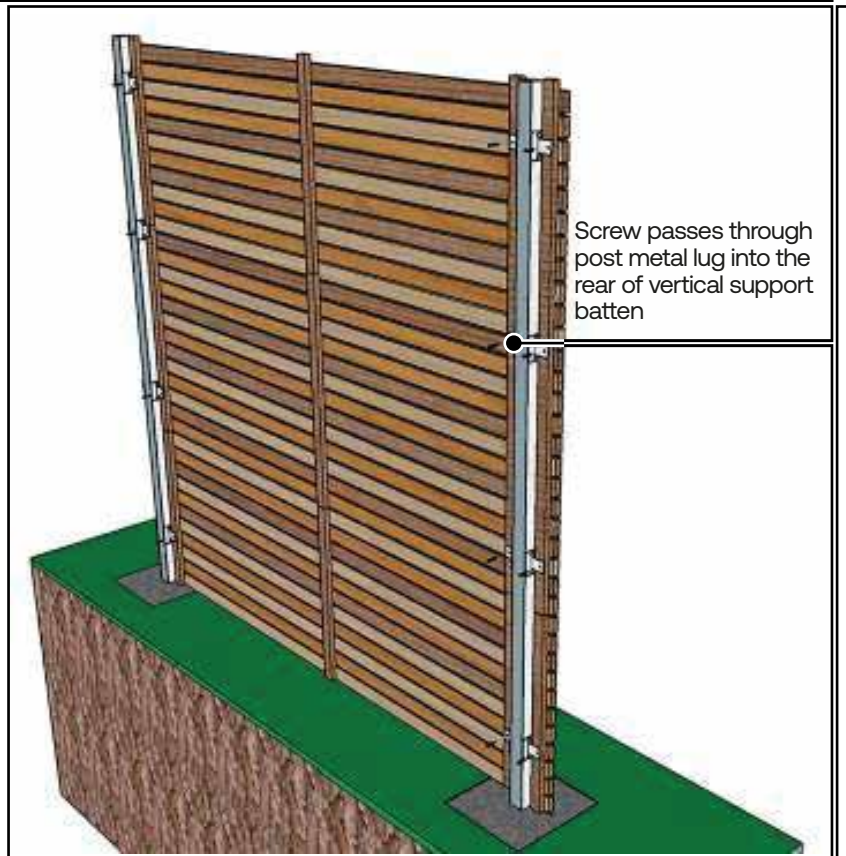

4


For end of a fence run the panel should be fixed to the outer side of a post.

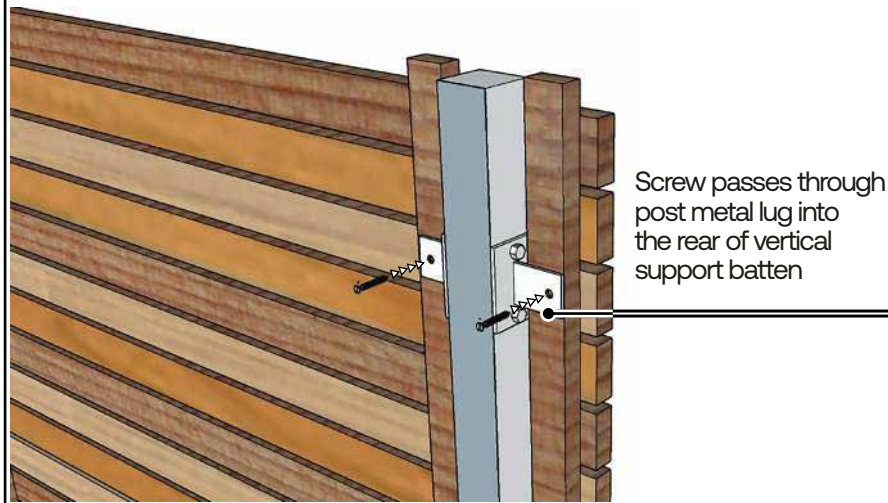

5

Attach the second panel side to the double sided post.


Screws should pass through the gap between the horizontal battens into the front of the vertical support and through into the back of the vertical support of the first panel

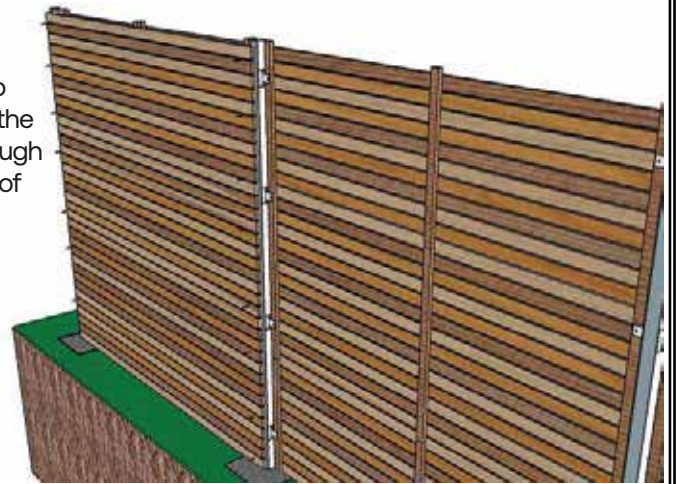


6

Push down the capping rail onto the top of the back batten up stands.

3 x 63 **Cedar Coloured Powder Coated Stainless Steel Screws** should be used to fix the capping rail into position.

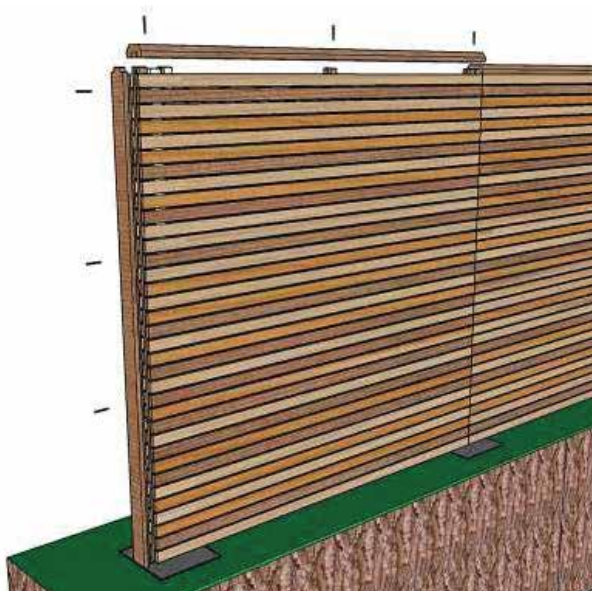

7

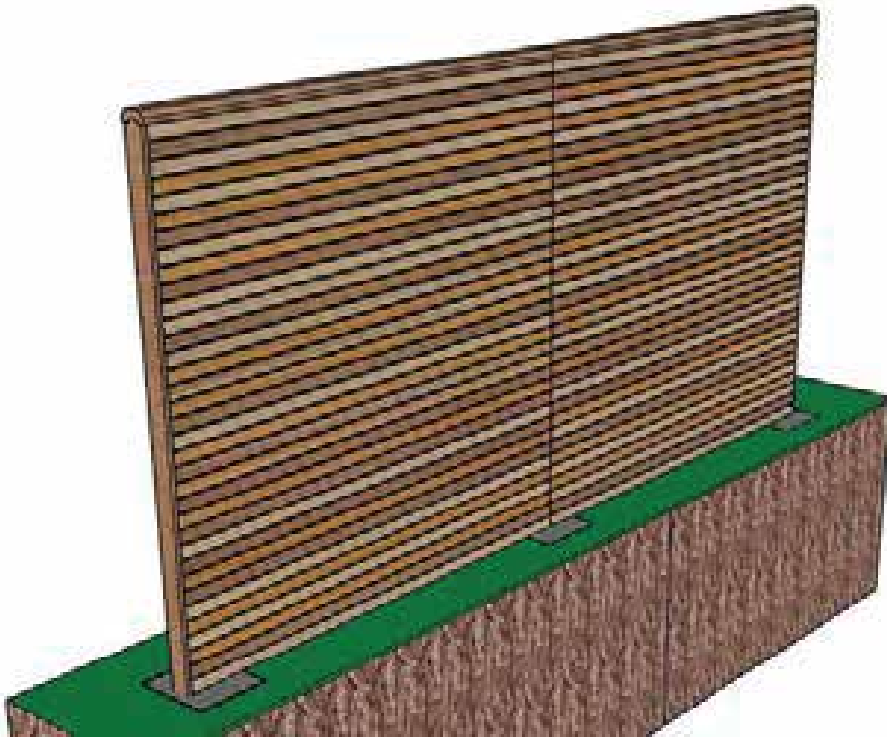

You have now completed your double sided garden fencing panel.
Congratulations!