



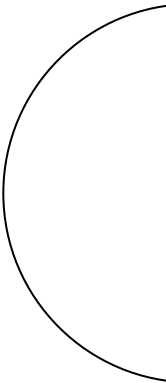


# Contemporary Fencing SEQUENCE

## Installation Guide For existing brick or block fencing

sales@contemporaryfencing.com  
01227 915054




1

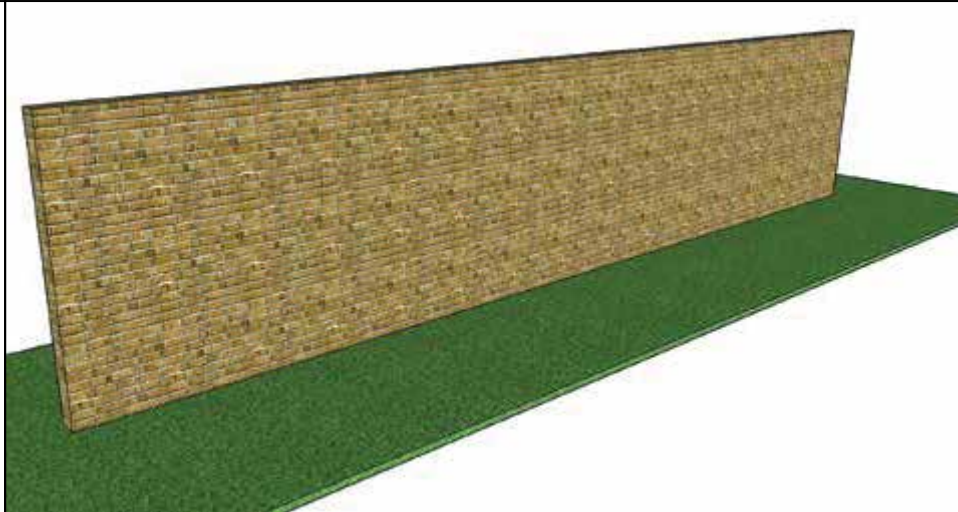


Existing wall run

2

Attach horizontal timber battens in three or four rows, positioned at the top, middle and bottom of the existing wall. These battens can be fixed into place by using plugs and screws.

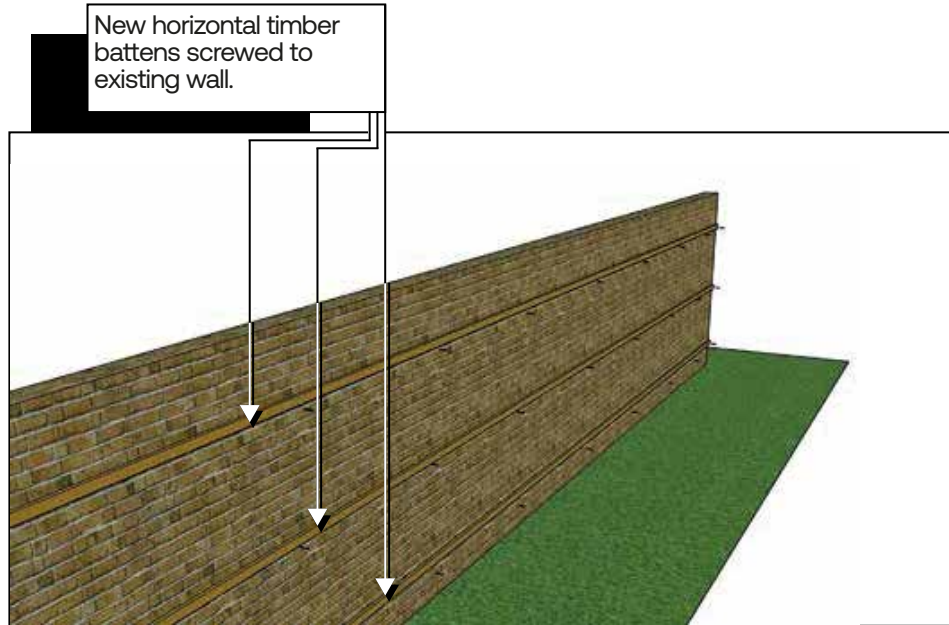

3

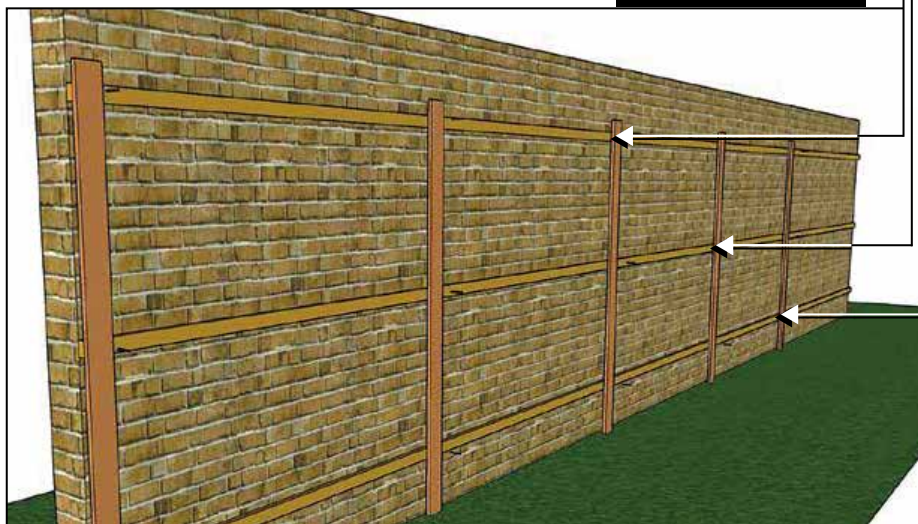


Now screw vertical fence boards to horizontal battens.

Screw new fence boards to the horizontal battens.

The position of these fence boards should be so that new panels sit to the centre of each board and to the outer edge at the end of the runs.

4

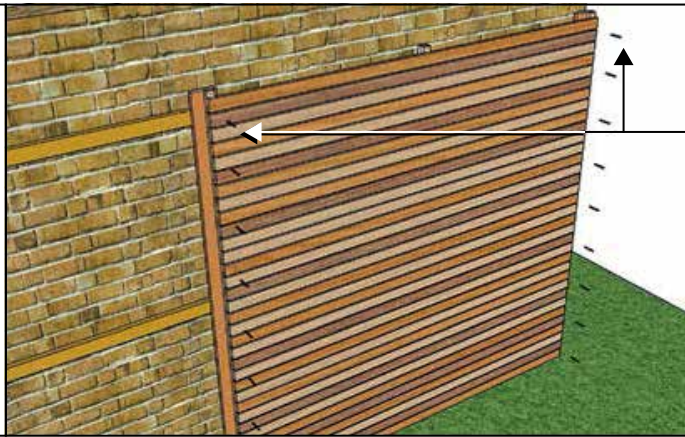

Screw through the gap between the horizontal battens into the front of the rear support batten and into the vertical fence board.


5

Align the next panel to ensure the batten positions match and line up. Use a spirit level to make sure the top line is level.

The edge of the panel should end central on the next vertical board for intermediate panels. If it's the last panel it should finish flush with the edge.



6

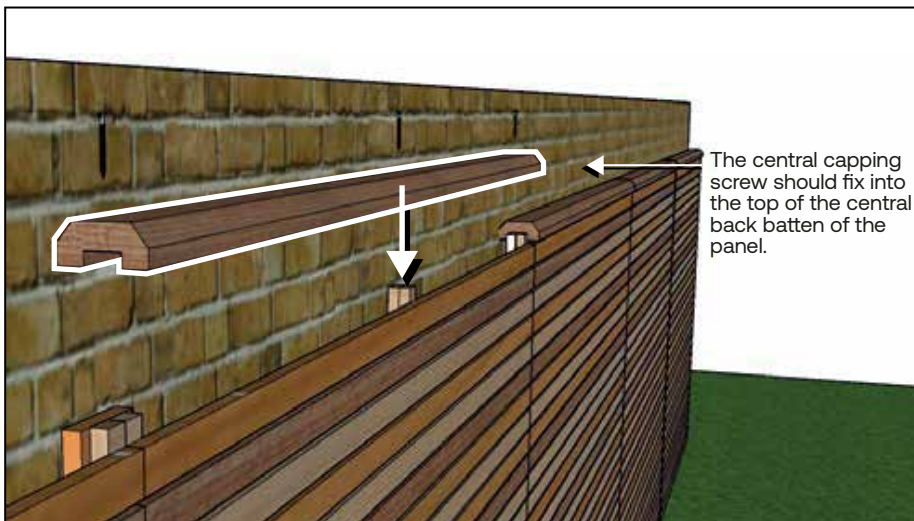

The central capping screw should fix into the top of the central back batten of the panel.

Push the capping rail down onto the vertical fence board top and back batten upstand.

3 x 63mm powder coated stainless steel screws should be used to fix the capping rail into position.

**7**



The completed fence run.