



Contemporary
Fencing

Cequence Privacy Fence

Installation Guide



01227 915054




sales@contemporaryfencing.com

1

Sequence Cedar posts to be set out with the centres equal to the width of the fence panel.

When at the end of a fence run the panel should end on the outer edge of a post.

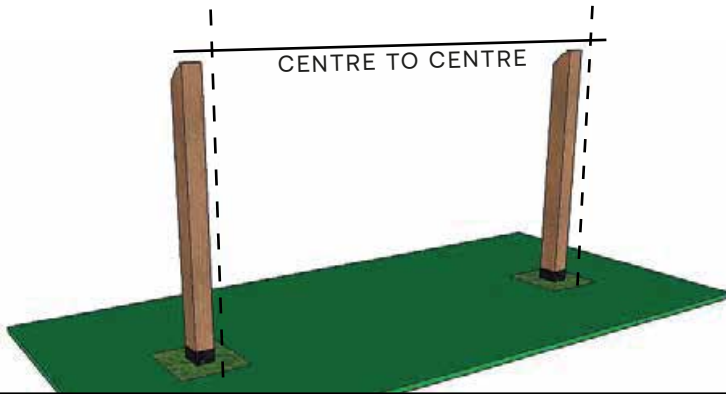


2

Install Sequence Cedar Posts into ground.

For more information on Post Saver Sleeves, visit:
www.postsaver.com

Post Mix Concrete

Compacted Ballast

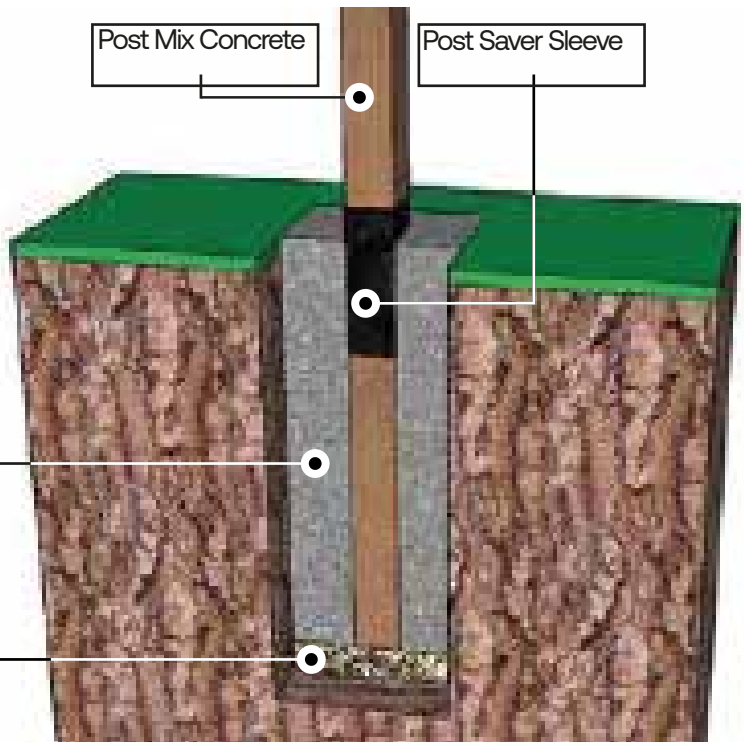



3

Screw Sequence panels into front face of post.

Intermediate panels are fixed midway to the front of the post.

For the end of a fence, the panel should be fixed on the outer edge of a post.

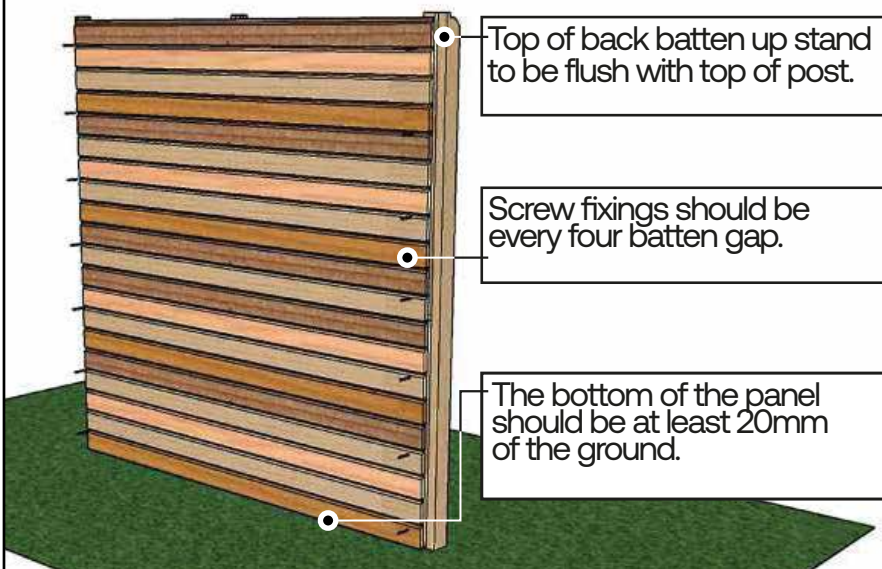

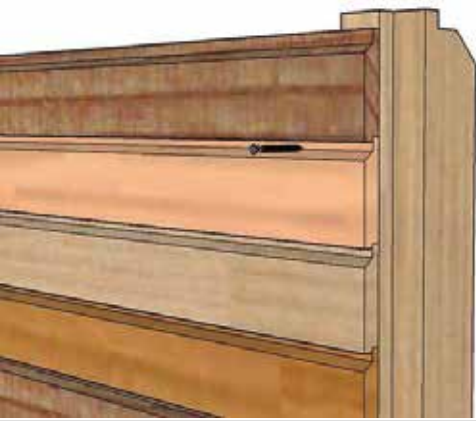

Top of back batten up stand to be flush with top of post.

Screw through the gap into the back batten and post.

4

Position the post centres to be equal to the width of the fence panel to be installed.

When at the end of a fence run the panel should end on the outer edge of a post.

Align the next panel ensuring the batten positions match up.

Use spirit level to make sure top line is level.



5


Attach the first panel side to the double sided post.


6

Intermediate panels are to be fixed midway to the front of the post. For end of a fence run the panel should be fixed on the outer edge of a post.

The central screw should fix into the top of the central back batten of the panel.

The panel should be flush with the outer edge of the post at the start and end of a run.

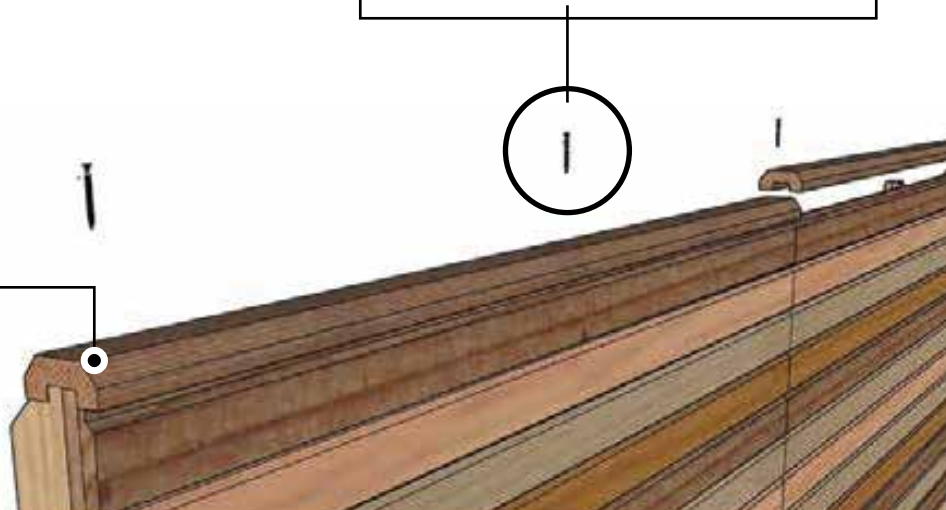

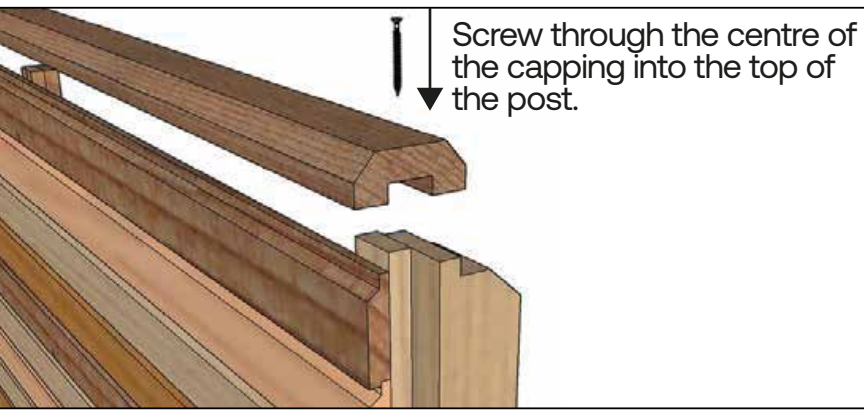


7

Attach the capping rail.

...and done!

The completed panel
front face.

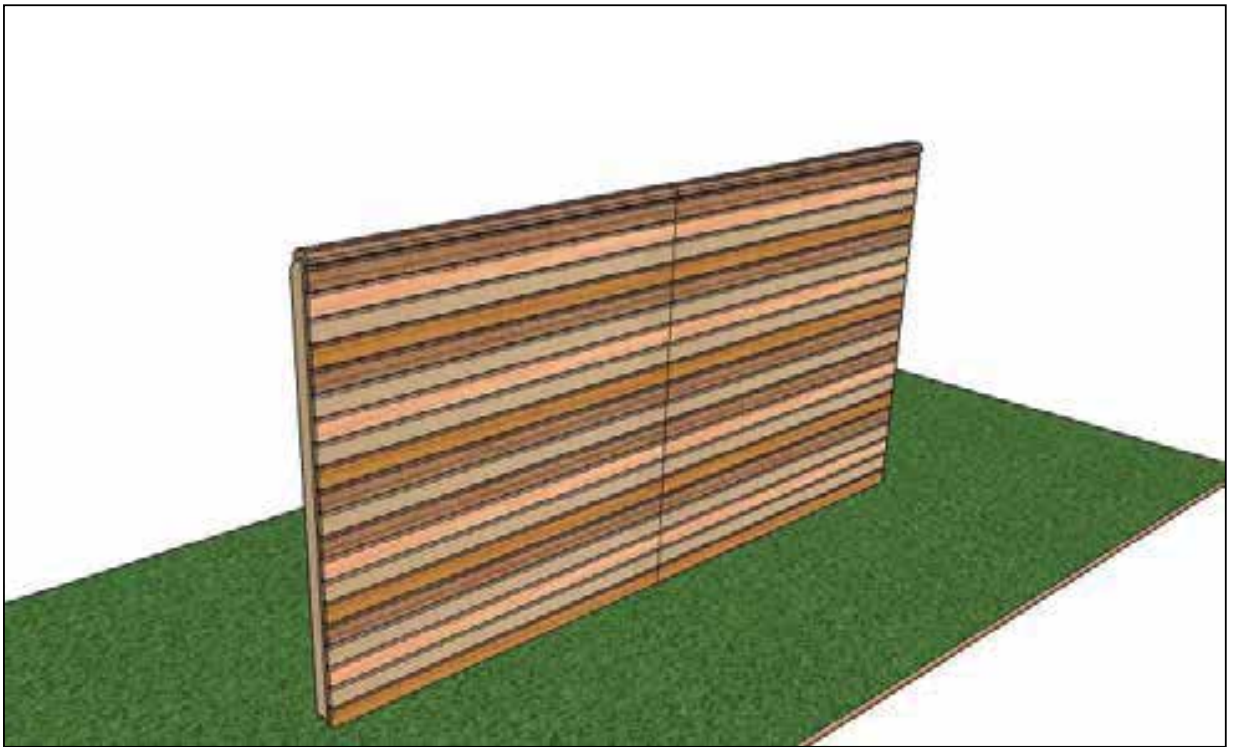

The completed panel
rear face.

