


# 1

Sequence fence posts to be set out with the centres equal to the width of the fence panel.

When at the end of a fence run, the panel should end on the outer edge of a post.

Fence Post

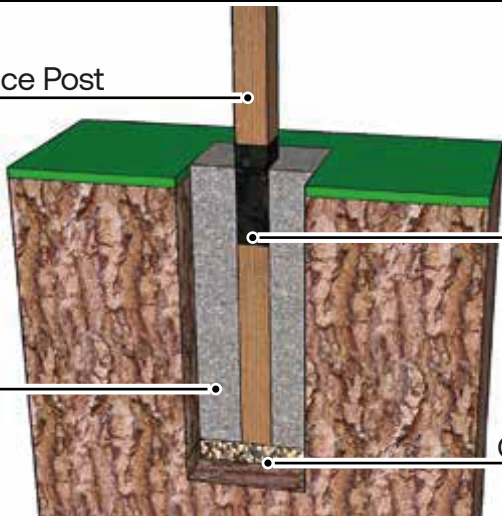

Post Mix Concrete

Post Saver Sleeve

Compacted Ballast

# 2

Install Cequence fence posts into ground.


For more information on Post Saver Sleeves visit: [www.postsaver.com](http://www.postsaver.com)

Top of back batten to be flush with top of post

# 3

Screw Cequence panels into front face of post.

Intermediate panels are fixed midway to the front of the post. For end of a fence run the panel should be fixed on the outer edge of a post.

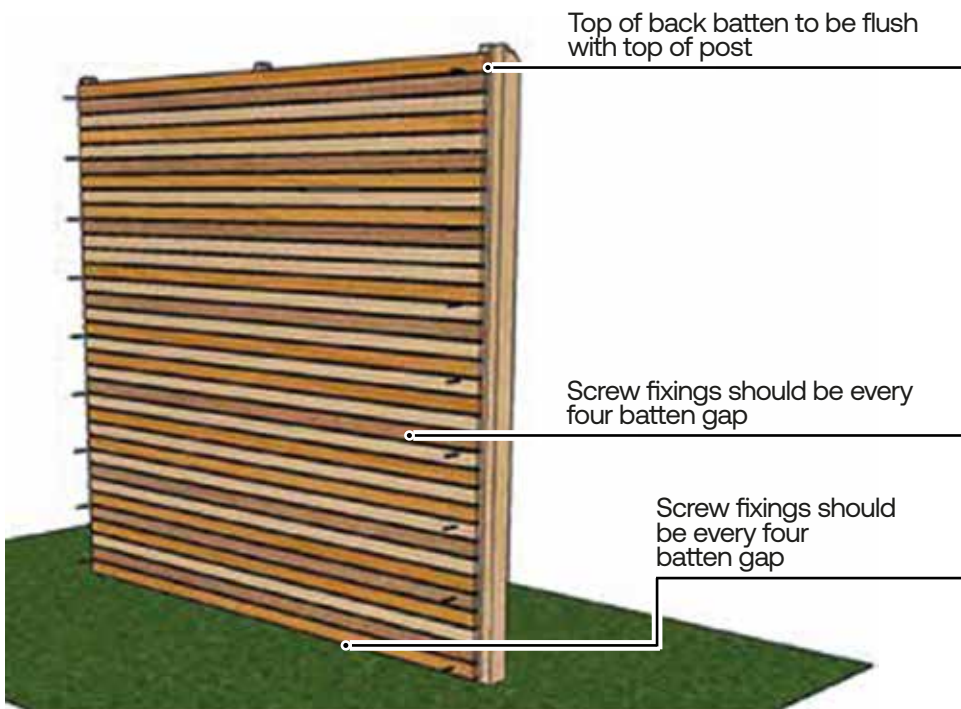

Screw fixings should be every four batten gap

Screw fixings should be every four batten gap

[www.contemporaryfencing.com](http://www.contemporaryfencing.com)




[sales@contemporaryfencing.com](mailto:sales@contemporaryfencing.com)



01227 915054

Top of back batten upstand to be flush with top of post and screw through the gap into the back batten and post

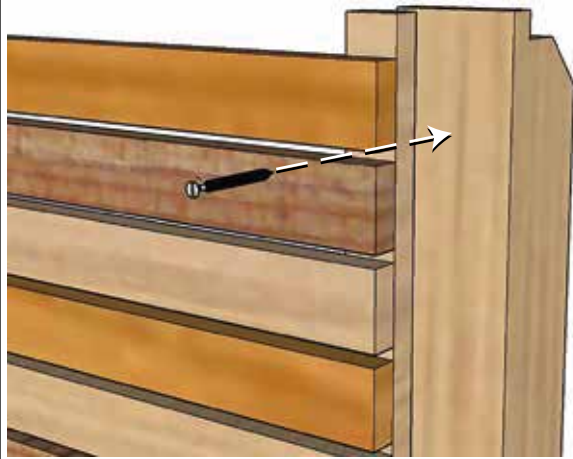

# 4

Screws should pass through the gaps between the horizontal battens into the front of the back batten and then into the post.

63mm powder coated stainless steel screws should be used.

Align the next panel ensuring the batten positions match up

Use a Spirit Level to make sure the top line is level




# 5

Align panels.

The panel should be flush with the outer edge of the post at the start and end of a run

The central screw should fix into the top of the central back batten of the panel

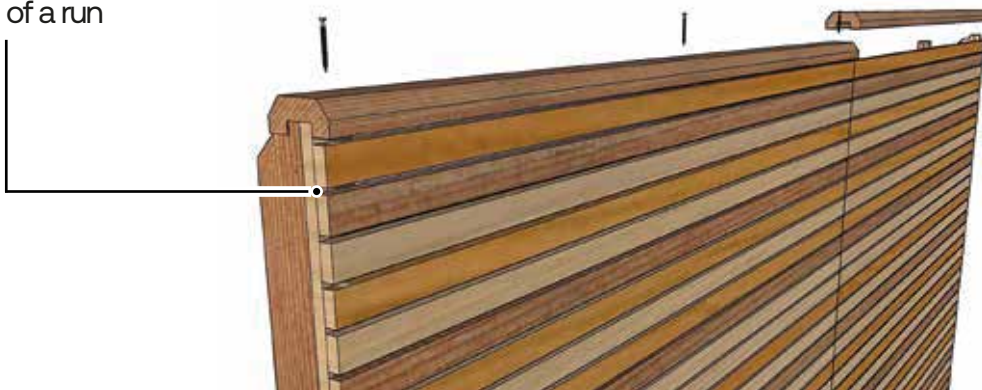

# 6

The Capping Rail is pushed down onto the profiled post top and back batten upstand.

3 of 63mm powder coated stainless steel screws should be used to fix the capping rail into position.

[www.contemporaryfencing.com](http://www.contemporaryfencing.com)




[sales@contemporaryfencing.com](mailto:sales@contemporaryfencing.com)




01227 915054

Screw through the centre of the capping into the top of the post

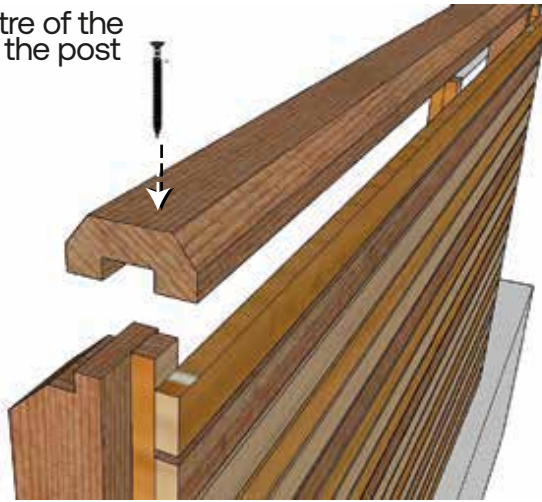

7

Attach the capping rail.

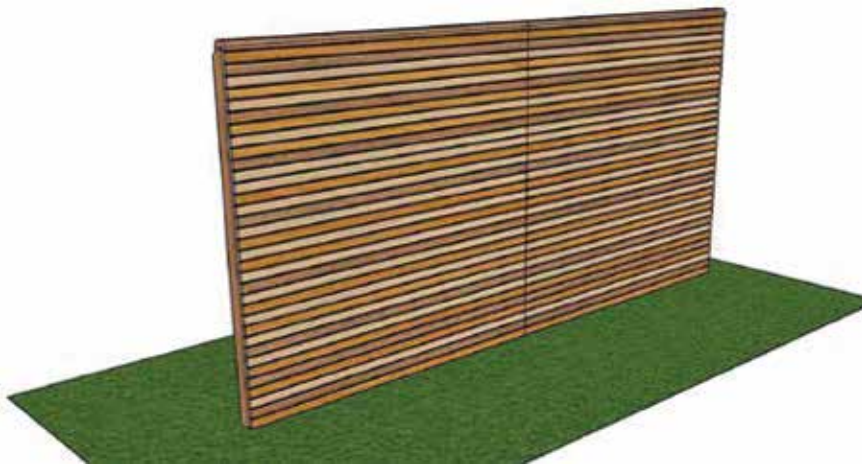

8

The completed panel front face.



9

The completed panel rear view.

[www.contemporaryfencing.com](http://www.contemporaryfencing.com)



[sales@contemporaryfencing.com](mailto:sales@contemporaryfencing.com)



01227 915054