

Cequence



# Top of Wall Fencing Guide

For Privacy Fencing



*Contemporary  
Fencing*

**Online Shop**

[www.contemporaryfencing.com](http://www.contemporaryfencing.com)


**Any questions? Contact us at:**

📞 01227 915054


✉ [sales@contemporaryfencing.com](mailto:sales@contemporaryfencing.com)

9-5 weekday customer service


**1** Drill top of brick or block wall with 28mm core bit to a depth 200-300mm to suit metal fixing stud.

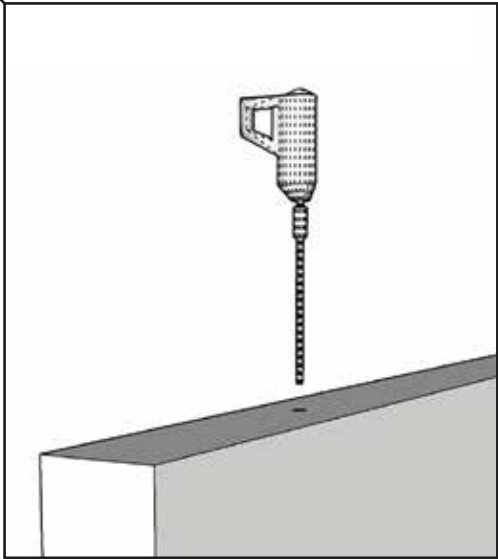

**2** Apply two part resin chemical fixing into hole.

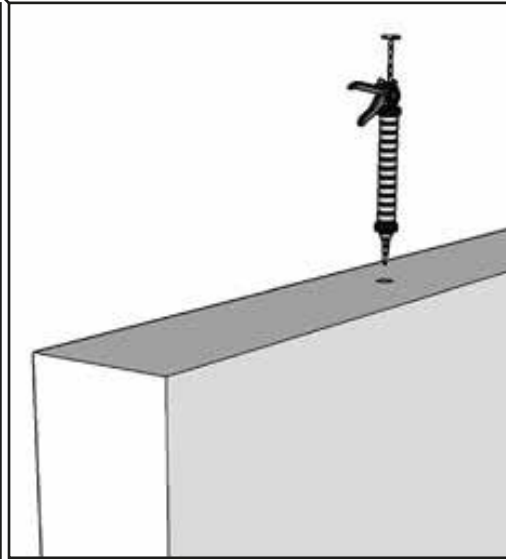

**3** Fit Sequence top of wall post with metal fixing stud into hole.

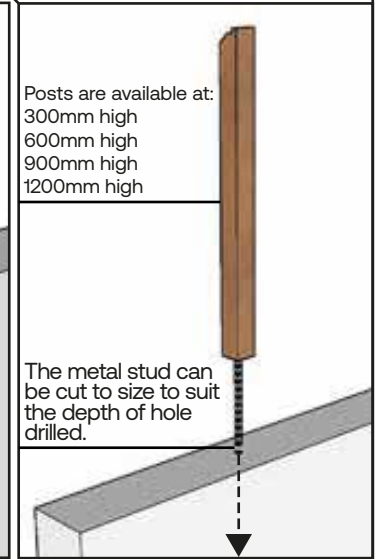


Posts are available at:  
300mm high  
600mm high  
900mm high  
1200mm high

The metal stud can be cut to size to suit the depth of hole drilled.

**4** Position of post centres to be equal to the width of the fence panel to be installed.


When at the end of a fence run the panel should end on the outer edge of a post.

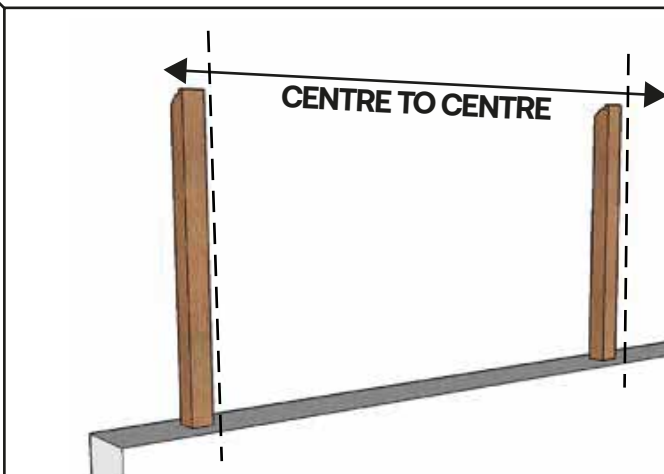

**5** Screws should pass through the horizontal boards into the back batten and then into the post.


63mm Cedar coloured powder coated stainless steel screws should be used.

Top of back batten upstand to be flush with top of post.

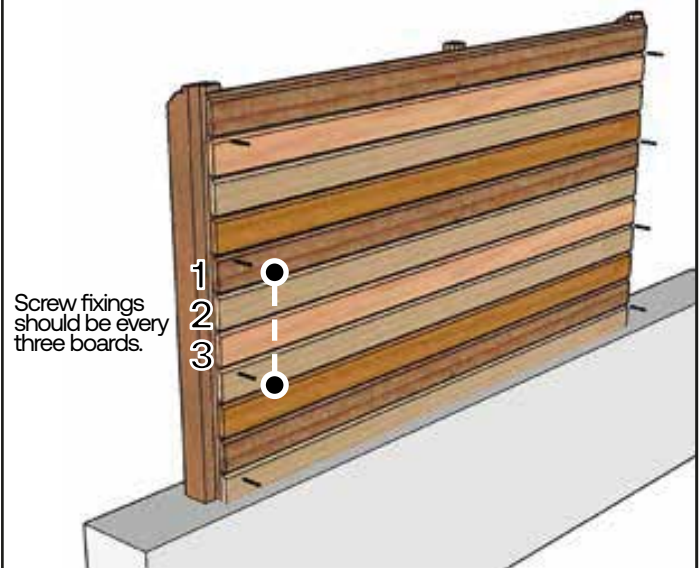

Screw fixings should be every three boards.

**6** Intermediate panels are fixed midway to the front of the post. For end of a fence run the panel should be fixed on the outer edge of a post.

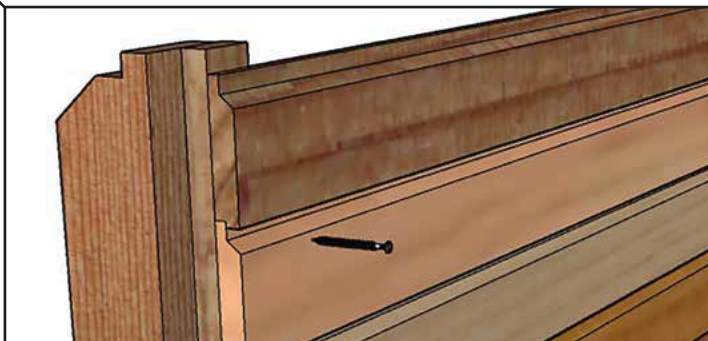


Contemporary  
Fencing

# 7



Push down capping rail onto the profiled post top and back batten upstand.

3 x 63mm cedar coloured powder coated stainless steel screws should be used to fix the capping rail into position.

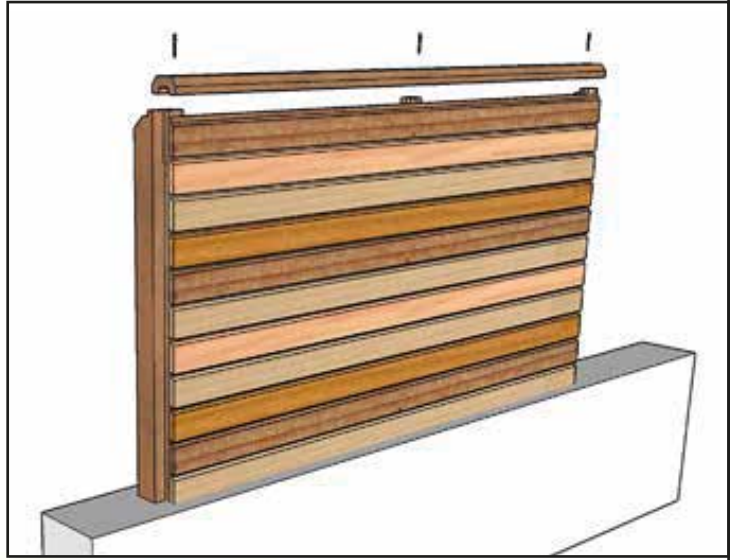

# 8

**The finished fence panel.**

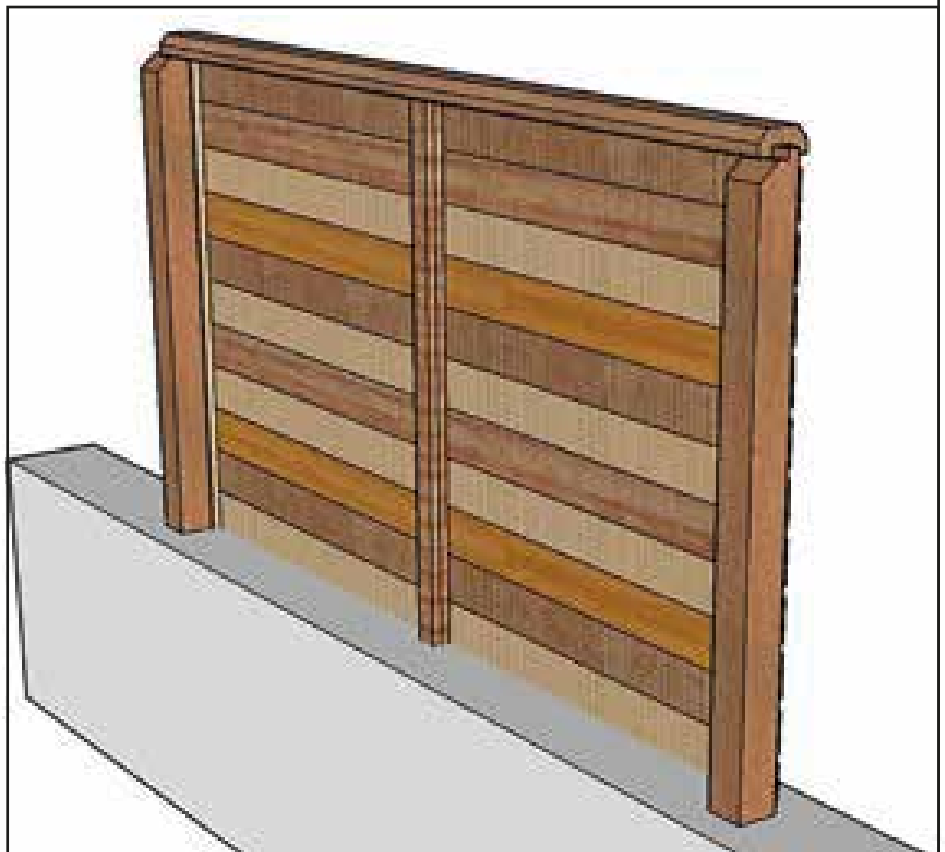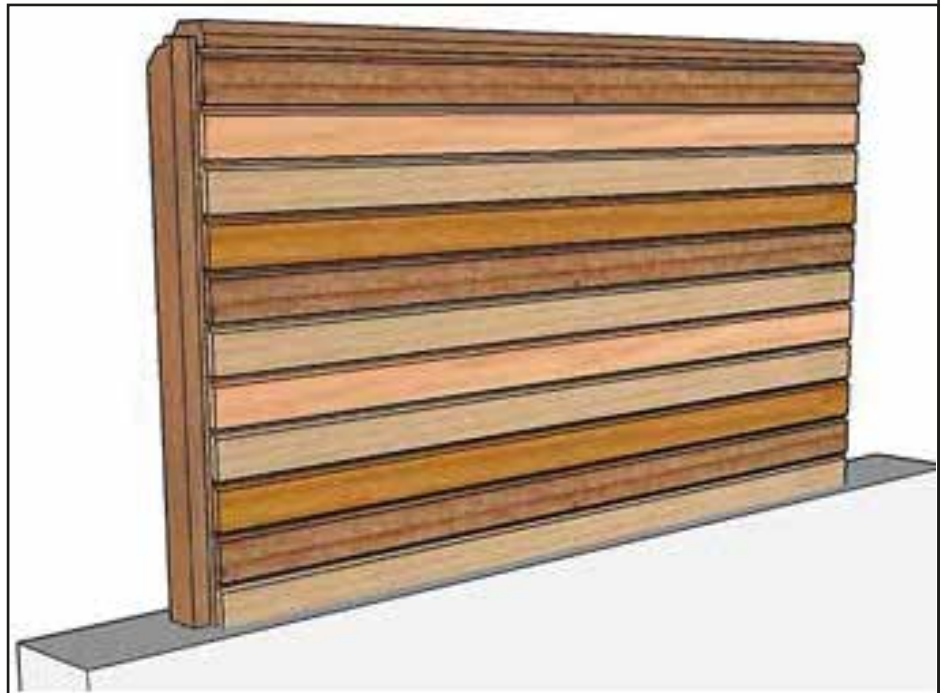

*Contemporary  
Fencing*