


## SEQUENCE

# Slatted Top of Wall Fencing Installation Guide



Contact Us


 01227 915054

 [sales@contemporaryfencing.com](mailto:sales@contemporaryfencing.com)

 [www.contemporaryfencing.com](http://www.contemporaryfencing.com)


# 1

Drill top of brick or block wall with 28mm core bit to a depth of 200-300mm to suit metal fixing stud.

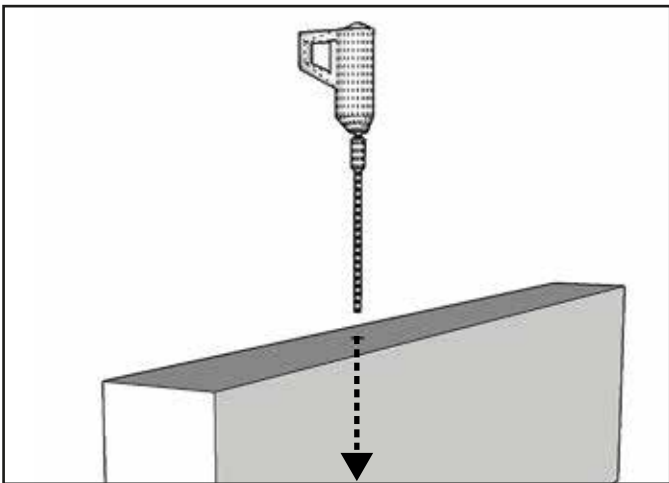

# 2

Apply two part resin chemical fixing into hole.

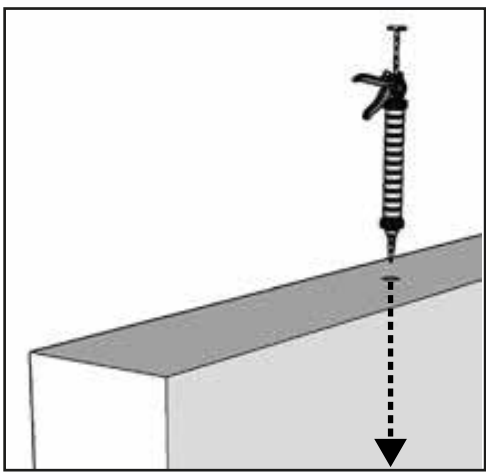

# 3

Fit Cequence top of wall post with metal fixing stud into hole.

**Posts are available at:**  
300mm high  
600mm high  
900mm high  
1200mm high




The metal stud can be cut to size to suit the depth of hole drilled.

# 4

Position of post centres to be equal to the width of the fence panel to be installed.


When at the end of a fence run the panel should end on the outer edge of a post.

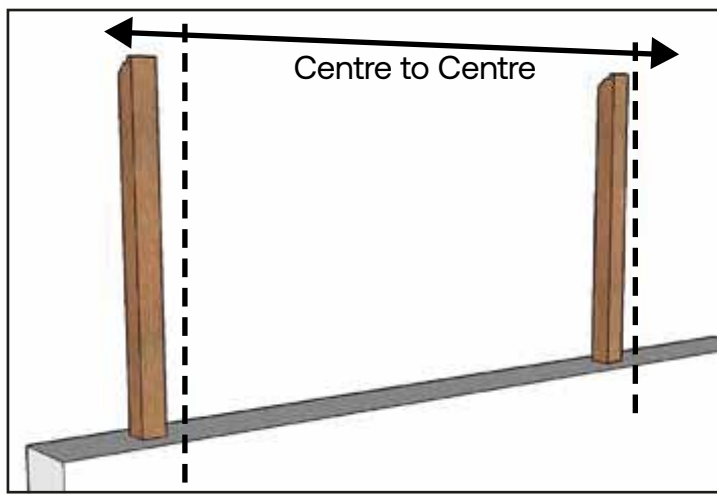

# 5


Screws should pass through the gaps between the horizontal battens into the front of the back batten and then into the post.

63mm powder coated stainless steel screws should be used.

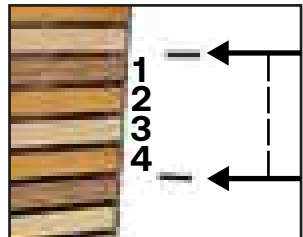


Top of back batten upstand to be flush with top of post.

Screws fixing should be every four batten gap.

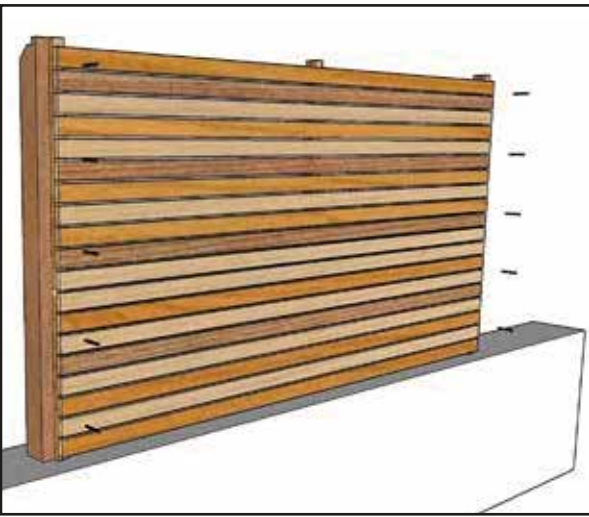

# 6


Screw through the gap into the back batten and post.

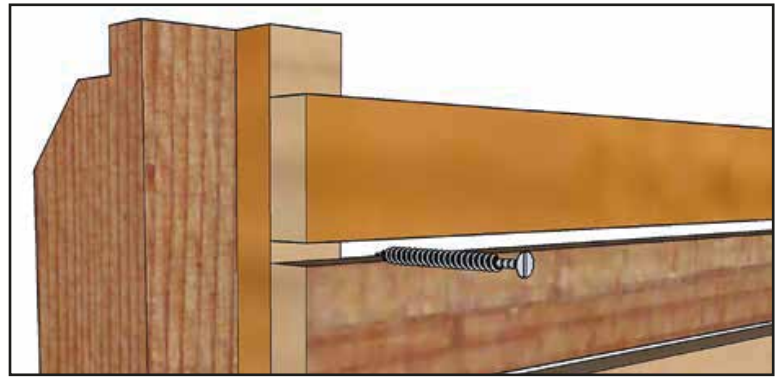

# 7


The capping rail is pushed down onto the profiled post top and back batten upstand.

3 x 63mm powder coated stainless steel screws should be used to fix the capping rail into position.

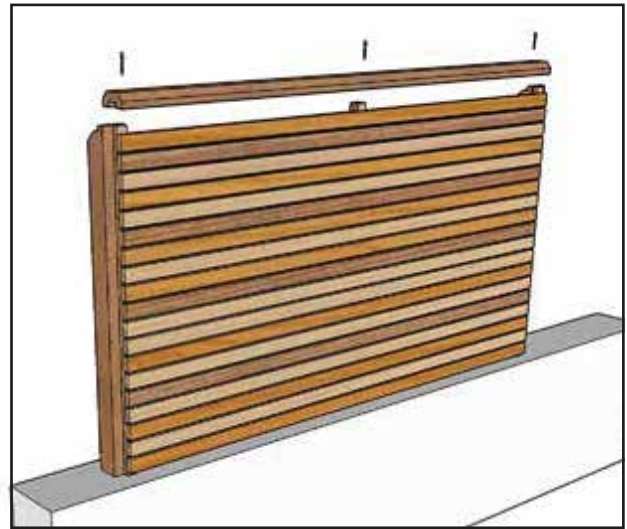

# 8

Attach the Capping Rail

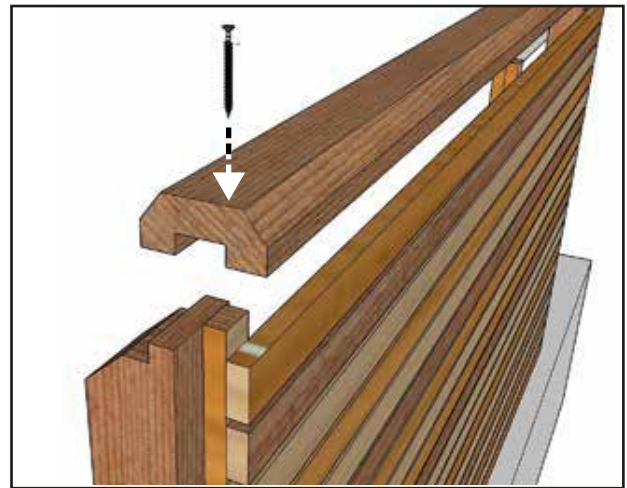

The completed top of wall panel.

